

MAINTENANCE

Periodic maintenance is required to ensure trouble free operation.

1. Clean and inspect the water strainer.
2. Clean and inspect the return air filters.
3. Check condensate for obstruction by pouring two (2) quarts of water over evaporators while making sure drainage occurs.
4. Visually inspect evaporators for restriction.
5. Ensure proper tightening of all electric connections and hose clamps.

Winterizing

Remove the condenser's inlet water hose which is the top hose of the unit. This is the hose from the water pump. Allow the water to drain out through the discharge side of the condenser; then purge with low pressure compressed air through the condenser from the inlet side of the condenser.

Close the thru-hull seacock strainer, if applicable. Allow water to drain from the pump hose again using low pressure air, if available.